



# Groomers

## Clipper Care & Maintenance

### Helpful Guide




We know how vital your grooming clippers are to you; these tools of your trade need to be regularly and properly maintained, to keep them running smoothly.




#### Daily Maintenance

- Clean your clippers between appointments by blasting or brushing hair from the blades
- Regularly lubricate your clipper blades with blade oil. Do this after every clean and every 15-20 minutes during operation. This is vital to prevent overheating and damage to both clippers and dogs skin
- Only use on clean, freshly washed dog hair
- Allow cooling time, don't let them overheat. Swapping blades and regularly using coolant spray can help
- Disinfect blades between appointments
- Store your blades at the end of the day in a clean, dry place, or storage case

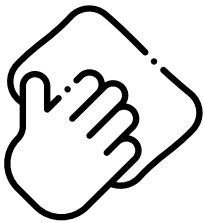

#### Thorough Cleaning

- Regularly clean your clippers thoroughly to prevent jamming and motor issues and also to stop germs spreading between clients
- Ensure the clipper is unplugged/turned off and remove all hair from any places it has collected, checking vents for blockages
- Carefully remove your blade and brush away hair and debris
- Allow blades to soak in a compatible blade wash solution, never use water. Scrub away any remaining build up
- Dry thoroughly to prevent rust and moisture
- Check the blade drive for wear and tear by performing a visual inspection for nicks, rounded tips, or deep grooves, and check for excessive noise or movement
- Either store your blades away, or if using again, replace blade, lubricate and test

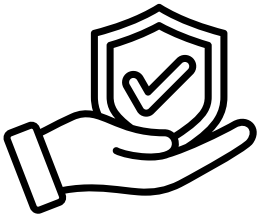

#### Safety checks

- Oil your blades with the clipper pointing downward, the blade horizontal and the motor running. Do not over oil as this can cause the motor to cut out. Not oiling enough can cause the motor to seize
- Check your blades for tension and placement
- Check that your blades are free from rust, have free movement without sticking, and don't have any broken teeth
- For corded clippers, check the cable regularly for nicks, cuts and other issues to maintain its performance and prevent a dangerous situation. Ensure trailing leads are not a trip hazard



#### Warning Signs

If your clippers aren't giving their best performance, here are the most probable reasons why.

- Dull blades - can be caused by improper maintenance or wear and tear on components
- Blades won't snap on - check blade drive, hinge and latch for defects or wear and tear
- Overheating - check for blade rust or damage, check the mechanism for stress, make sure your blades are oiled
- Losing power - Has it overheated? Allow your clippers to cool and try again. Check the power cable and socket for damage (corded), check the charging base and contact points (cordless). Check for debris build up in the mechanism.
- Noisy clipper - Check the blade is not loose or in need of replacing, check for wear and tear on mechanical parts

If any of the above points cannot be solved with correct maintenance, book your clipper in for service/repair. **Clippers should be serviced at least once a year, twice a year if used in a busy salon.\***



#### Contact us

For questions regarding your product, warranty or for spares, please contact us on 01635 581958 or at [customer.service@groomers-online.com](mailto:customer.service@groomers-online.com).

More information can be found on our website and in our blogs; scan the QR codes below.

\*Any internal maintenance or servicing not carried out by a professional during the warranty period may invalidate your warranty. Check your product manual for warranty terms and information. Please retain all copies of servicing and repair documentation as these may be required to validate your warranty.



Clipper care

SCAN  
US



Troubleshooting